



ASSA ABLOY

RESIDENTIAL THRESHOLD

Applies to the following thresholds:


218, 219, 233, 231, 2052, 2053, 2054, 2055

Testing/Ratings:




Category J gaskets for use with listed steel frames and/or classified steel covered composite, hollow metal doors rated up to and including 3 hours; wood and plastic covered composite doors rated up to and including 1-1/2 hours; and wood core doors rated for 20 minutes. (Thresholds may or may not contain gasketing material).

Tools Required:



Installation Instructions:

Top (plan) view of door opening (out-swing type)

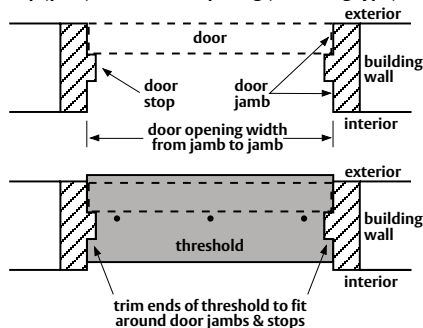

1. Measure width of door opening from jamb to jamb and stop to stop and mark ends of threshold for trimming.
2. Trim ends of threshold to fit around door jambs and stops. Position flat (or top) portion of threshold directly under door. Lower slope should point to the exterior.
3. Drill pilot holes in floor through pre-drilled holes in threshold.
4. Press vinyl feet into grooves at underside of threshold legs.



Figure 2

5. Caulk ends of threshold (important for effective sealing and moisture control).
6. Secure threshold to floor with supplied screws. (When fastening to concrete, use anchors; anchors not included.)

www.pemko.com

© 2010 Pemko Manufacturing Co.
RT14_WEBINS
Rev 1 - 01.28.10